

# **CONOTEC**®

Digital Temperature/Humidity Indicator

CONOTEC CO., LTD.

www.conotec.co.kr

# Operating Manual FOX-M200 FM-2PT-1 FM-2CA-2 DIGITAL TEMP DIGITAL TEMP DIGITAL TEMP FOX-PM series FOX-CM series

# Safety and Hazard Instructions

# △ Safety

Caution

Please use this item after installing the duplex safety device in which is applied at dangerous factors such as serious human injury or damages of property & important machine because this item is not designed as safety device

# △ Safety Instrruction and Hazard Warnings

- Please read the operating manual carefully before putting the device into operation.
- · We will not assume any responsibility for damage to assets or persons caused by improper handling or failure to observe the safety instructions or hazard warnings.
- · For safety and licensing reasons, unauthorized conversion and/or modification of the device is not permitted.
- Do not exceed the maximum permissible current in case of higher loads, use a contactor of adequate power. Make sure that the supplied voltage matches the values specified for the instrument.
- The device must be adequately protected from water and dust as per the application and must be accessible via the use of appropriate tools.
- The device must not be exposed to extreme temperature, sunlight, strong vibrations or high levels of humidity.
- Operation or installation is not permitted under unfavorable ambient conditions such as wetness or excessive induction loads or solenoid and dust, combustible gases, vapors or solvents, especially high-frequency noise.
- Avoid operation or installation close to high-frequency fields such as welding devices, sewing machines, wireless transmitter, radio systems, SCR controller, etc.
- Do not install the sensor cable nearby signal cable, power cable, load cable.
- · Please use the shield cable when the sensor cable's lengthened, however do not make it too much longer.
- $\cdot\,\mbox{Please}$  use the sensor cable without any cutting or flaw, blemish.
- ·The device is not a toy and should be kept away from children.
- Installation work must only be carried out by suitably qualified personnel who are familiar with the hazards involved and with the relevant regulations.
- · You shouldn't tinker with anything or the product may not be opened or disassembled unless you know what you're doing.
- · Please ask us about this questioning.

# ⚠ Danger

- Hazard related to electric shock
- 1.Electric shock Do not touch the AC terminal while current is flowing. It may cause electric shock.
- 2. Disconnect the input power before checking the input power.

# 2 Digital Panel Meter

# 1. FOX-M200 & 2PT-1 & 2CA-2

Model	FOX-M200	FM-2PT-1	FM-2CA-2		
Sensor	NTC(10K)	PT100Ω	CA(K)		
Temp.range	-55.0 ~ 99.9℃	-199.9 ~ 400℃	-50 ~ 1200℃		
Power Supply	230VAC 50/60Hz	100~240 50/60Hz			
Power consumption	Maximum: 1.5VA				
Ambient	0 ~ 55℃				
Temp/Humi	35 ~ 80%RH				
Storage Temp.	-10 ~ 70°C				
Correction of Temp.	<ul> <li>If you take off the front cover and use of up/down key, you can use the correction function for temperature.</li> <li>(M200 : left key = up, right key = down)</li> <li>Return at corrected temperature automatically after 5 seconds.</li> </ul>				
Display height	12.4mm				
Size	72mm X 36mm				

### 2. FOX-PM series & CM series

Model	FOX-PM500 FOX-PM510			-PM6000(T) -PM6101(T)	FOX-CM5000 FOX-CM5000T
Sensor	PT100Ω		N <sup>-</sup>	ГС(10K)	CA(K)
Temp.range	-50 ~ 400	$^{\circ}$	-55	~ 99.9℃	0 ~ 1200℃
Waterproof	Waterproof			Non-waterproof	
Power Supply	Please use the power supply only 12V AC/DC (electric current = over 150mA)  If you use a special power supply, please use the adaptor. (When deliver = 12V DC)  - Specification for Adaptor: 12V AC/DC output minimum electric current = 150mA  - If the adaptor is not used, it may cause a fire or out of order.  - When sensor wire lengthened(PM series)  ⇒ Pls use the 3P cable.  - When sensor wire lengthened(PM series)  ⇒ Pls use the thermo couple cable.  * If you use it over 85°C, you have to use a special sensor.				
Ambient	0 ~ 70℃				
Temp/Humi	35 ~ 100%RH				
Storage Temp.	-10 ~ 70°C				
Display height	56.8mm				
Correction of Temp.	After taking off the back panel, on the basis of white wire, Short-circuit white and red: increased by 1°C white and black: reduced by 1°C (But.PM 6000 series are increased/reduced by 0.1°C.)				
Maximum correctiom	±30℃	°C ±10°C		±10℃	±50°C
Material and Type	stainless S acryl, wall-mounted	- Dotti oldo		PM5000,PM6000,CM5000 PM5000T,PM6000T,CM5000T PM5101,PM6101	
,,,,,	acryl, stand type		e side h side	PM5101T,	PM61011

### 3. FM-5N & FM-5P & FM-5C

Model	FM-5N	FM-5P	FM-5C	
Sensor	NTC(10K)	PT100Ω	CA(K)	
Temp.range	-55.0 ~ 99.9℃	-199.9 ~ 400℃	-50 ~ 1200 ℃	
Power Supply	100 ~ 240 VAC 50/60Hz			
Ambient	0 ~ 55°C			
Temp/Humi	35 ~ 80%RH			
Storage Temp.	-10 ~ 70℃			
Correction of Temp.	Rear terminal - UP Key: 13,14 - Down Key: 13,15			
Display height	20.3mm			
Size	96mm x 48mm			

# 3 Connection

<drawing 1>

Double shield cable

■ FM-5P & FM-5C & FM-5N

11 | 12 |

Pt100Ω

■ FOX-PM series

■ FOX-CM series

over12 VDC/150mA

13 | 14

DIGTAL TEMP

Sensor PT100 Ω & NTC

Sensor CA(K)


(over 150mA)

\* No related polarity
of power resource.
over12 VDC/150mA

Input

LOV

### ■ FOX-M200 & FM-2PT-1 & FM-2CA-2

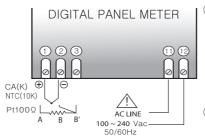

Digital

Panel Meter

16

18

POWER SUPPLY 100~240V 50/60Hz

<inside>


- (1) Connection of input
- When PT100Ω connected, pls connect ①A ②B ③B'
- When CA(K) connected,
  pls connect ① + ②
  When NTC(10K) connect,
- pls connect ① and ②
  without polarity

  (2) Please use shield cable like
  <drawing 1>. as following
- case :To lengthen input wire for measuring
- Possibility for of a noise
   (Only FOX-M200 model)


White Back

# Dimension


# ■ FOX-M200 & FM-2PT-1 & FM-2CA-2

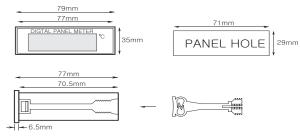

# ■ FOX-PM series & FOX-CM series

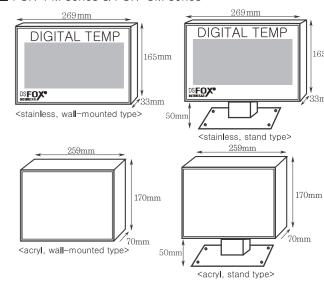

# ■ FM-5P & FM-5C & FM-5N

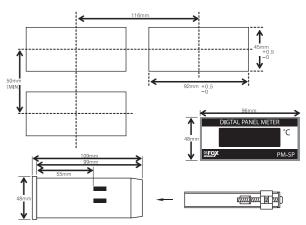

# 5 Simple troubleshooting tip

# ■ If displaying ERROR while using the product:

- is displayed when DATA memory elements inside are damaged due to powerful noise from outside while using the product. In such a case, contact our company for customer service. Despite the controller is provided with supplementary measures for outside noise, it cannot endure infinite noise. Noise (2KV) abnormality may damage inside of the unit.
- If p-E or 5-E messages appear, the sensor is defective. Please check the sensor.
- \*\* This device's specification can be changed without any notification to improve its quality
- H.Office: Ballyonsandan 1-ro, Jangan-eup, Gijang, Busan, Republic of Korea ■ Factory: Ballyonsandan 1-ro, Jangan-eup, Gijang, Busan, Republic of Korea

# FAX:82-51-819-4562

A/S TEL: +82-51-819-0426 Homepage: www.conotec.co.kr E-mail: conotec@conotec.co.kr Main Products & Development

- Digital Temperature /Humidity Controller

- Digital Timer, Current/Voltage Meter

- Other Products Development