EMERGENCY STOP SW ITCH

KPS-0 □□ Cylindrical Photo sensor User manual

KPS - 0 <u>--</u>- <u>--</u>


$\bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc$			
 Sensing type 	D	Diffuse-reflective	
	R	Retro-reflective	
	T	Through beam	
2 Output	N	Receiver	
	Е	Emitter	
③ Detecting range	None	Normal type	
	1	40cm (Diffuse-reflective)	
④ Body material	L	Nylon	




Specification						
	KPS-OT-L	KPS-ORN-L	KPS-ODN-L	KPS-ODN-1L		
	KPS-OTE-L KPS-OTN-					
Sensing type	Through-beam	Through-beam Retro-reflective Diffuse-r		e-reflective		
	Emitter Receiver					
Detecting range	15m	3m	10cm 40cm			
Detecting dbject	minimumΦ15mm	minimumΦ75mm opaque object	20×20cm Paper(white)			
	opaque object	D 115D(640				
Light source	IR LED(850nm) Red LED(640nm) IR LED(850nm)					
Power supply	12~24VDC ±10%, Ripple(P-P) Maximum 10%					
voltage						
Power consumption	Maximum 30mA					
Output control	NPN Open collector, Load current; 100 mA max., Load power supply voltage: 30 VDC max.					
Operation modes	Light ON / Dark ON					
Response time	From operation to reset; Maximum 1ms					
Adjusting	Fixed	Multi-turn(15	cycles)			
sensitivity						
Operaion	Green(Power)	Green(Power), Red(Oper	raion)			
Indicator						
Circuit	Power supply reverse polarity protection, Output short-circuit protection and Over					
protection	current protection					
Insulatio	Minimum 20MΩ at 500VDC					
n						
resistanc						
е						
Dielectric	1000VAC 50/60Hz for 1 miniute					
strength	10 to FF Ha for 1mi	nuta 1 mm dauble amplitude for 2 be	ours aash in V	Vand 7		
Vibration	10 to 55 Hz for 1 minute, 1 mm double amplitude for 2 hours each in X, Y and Z					
resistance	directions 500m/s2.3 times each in V. V and 7 directions					
Shockresistance	500m/s2 3 times each in X, Y and Z directions Sunlight: 10000lx max., Incandescent lamp: 3000lx					
Ambient	Sunnight. Tooooix max., incandescent lamp: 3000ix					
Iight						
interferenc						
e						
Ambient	Operating: -10 to 60°C/ Storage: -25 to 75°C (with no icing or condensation)					
temperatur						
compet a car						
Ambient humidity	35~85% RH					
Protection degree						
Connection	Pre-wired					
Wiring	Standard cable(2m/Φ4)					
"11 1118	2P 4P					
Accessories	Fixing nuts	Reflector(40×60mm), Adjuster, Nuts	Adjus	ster, Nuts		
Weight	62g					
Material	Body: Nylon, Lens: PC					


EMERGENCY STOP SW ITCH

Timing Chart

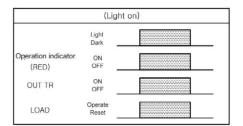


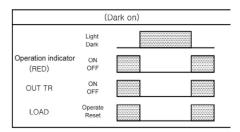


Output Circuit

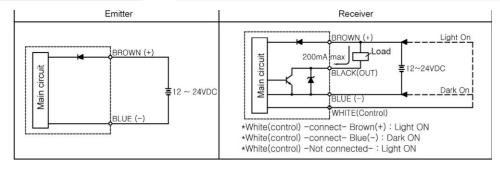



Parallel Operating Range

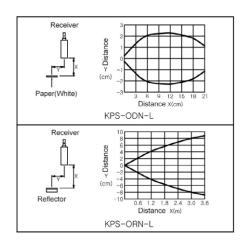

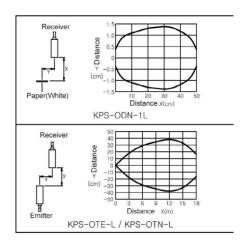

Angle Characteristic

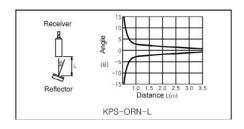


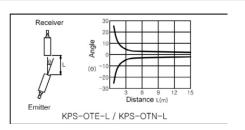


EMERGENCY STOP SWITCH

INSTALL


- Diffuse reflective
- 1 Generally set to maximum sensitivity. Adjust sensitivity considering the effects of objects, walls, and columns around objects detected.
- 2. Locate the object in the detection position and increase its sensitivity slightly to determine its operating position (a)
- 3. Remove the detected object and increase its sensitivity to check the operating position (b)
- 4. The intermediate position of (a) and (b) is the optimal position. (Volume knob: 15 turns)

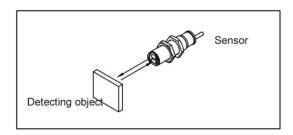


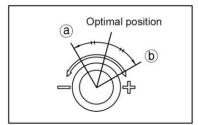


- Retro reflective
- 1 Place the sensor and the reflector face to face
- 2. Move the reflector and the sensor left and right to confirm the extent to which the motion indicator lamp illuminates, and install it at its midpoint.
- 3. The up and down directions shall also be set as follows in section #2
- 4. After adjustment is completed, place the detecting object on the optical axis, check its stability, and secure it.

 *If more than one sensor is used in parallel, the gap between each sensor shall be not less than 30 cm.
 - *Refer to "Diffuse Refiective" Items for instructions on how to adjust the volume
 - *If the detecting object has a higher reflectance than white matte paper, the detection face should be leant 30 to 40 degrees to the sensor.
- *Light ON: Operate when the detecting object is located between the emitter and the reflector
- *Dark ON: Operate when the emitter and the reflector face each other directly.

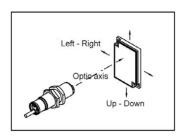

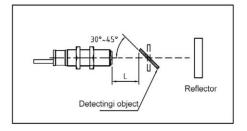


- Through-beam
- 1. Place the emitter and the receiver face to face on a straight line.
- Fix one side and move the other up, down, left, and right to determine the extent to which the motion indicator illuminates then install in the central position.
- * If the detected object is translucent or very small, it may not be detectable
- * If multiple products are used, avoid interference by switching the location of the emitter and the receiver.

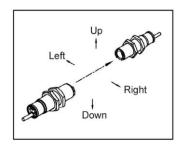

EMERGENCY STOP SWITCH

Dimensions

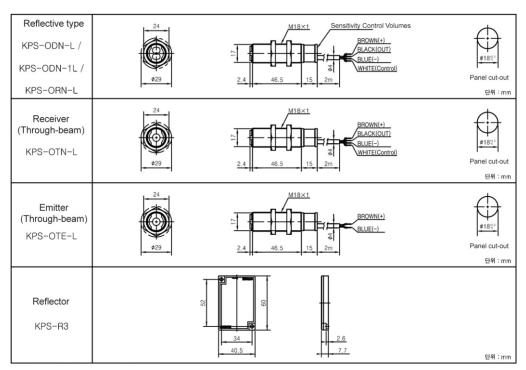

^{*} Nut tightening strenth: Maximum 30kgf.cm.

• PRECAUTIONS

- 1. Avoid using cleaning agent when removing debris on the lens. However, if cleaning is necessary, wipe lightly with a soft cloth with alcohol. Organic solvents such as thinners and gasoline are prohibited for cleaning
- 2. Use a sun visor when strong external light (solar or incandescent lighting) comes into the sensor's sensing angle.
- 3. Do not use the sensor under the environment with corrosive gas or salty-wind.
- 4. Do not use the sensor under the environment with degeneration and deformation due to load.
- 5. Avoid flame and direct heat
- 6. Insulate unused wiring
- 7. Do not use the sensor in environments in excess of rated environmental specifications.
- 8. Do not use the sensor in a place where the sensor may receive direct vibration or shock.
- 9. Using in the range of 80% of maximum operating distance is recommended.
- 10. Do not connect any power or load higher than the rating.
- 11 Check the polarity before applying the power.
- 12. The maximum cable length is 10m